


# STANDARD AXLE-WEIGHER REMOTE OPERATION INSTRUCTIONS

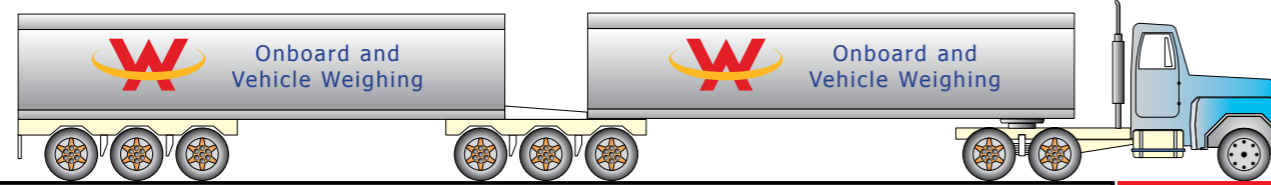


**Step 1**

Ensure the display reads 0.00t before entering on to the weighbridge.



**Step 2**

Vehicle's first axle group is placed on the weighbridge. Remote display flashes to indicate weight has been captured. Vehicle can move on.

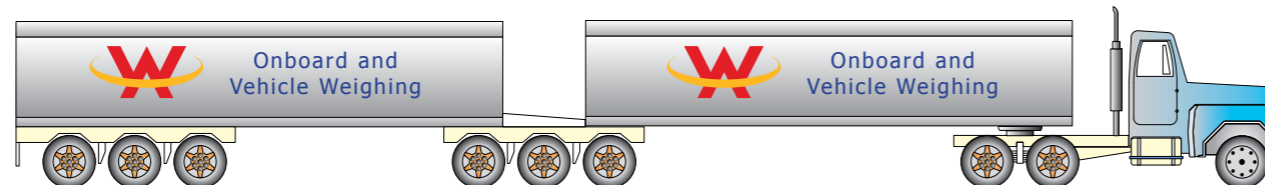


**Step 3**

Vehicle's second axle group is placed on the weighbridge. Remote display flashes between the current axle group weight and the total weight of both axle groups. Vehicle may move on.



**Step 4**

Vehicle's third axle group is placed on the weighbridge. Remote display flashes between the current axle group weight and the total weight of all three axle groups. Vehicle may move on.

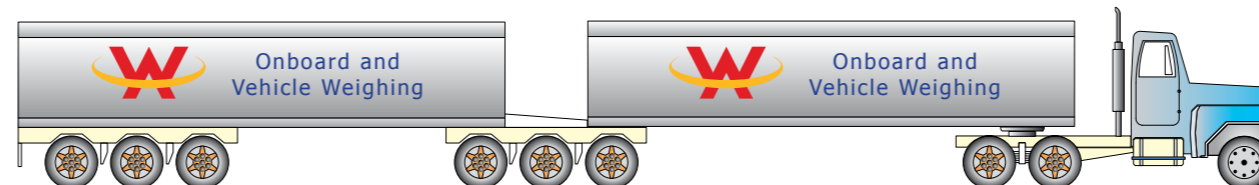

**Step 5**

Vehicle's fourth axle group is placed on the weighbridge. Remote display flashes between the current axle group weight and the total weight of all four axle groups. Driver may use driver control station or proceed to office.



**Step 6**

After the vehicle leaves the weighbridge and the display returns to 0.00t, approximately 10 seconds later, the remote will "reset". That is, all segments will temporarily display and the accumulated total will be reset back to zero.

